

# Empowering your business, one transaction at a time.

Innovative payment solutions delivered with a personal touch.

Accept payment in-person or online with our innovative terminal solutions. Whether you need a stationary, wireless, mobile, or virtual terminal, a payment gateway, or software integration, ECS is the right choice for you.



# Diverse solutions for every scenario.



## Credit & Debit

With a diverse range of credit and debit card processing solutions, we have what you need.



## ACH

Completely electronic, ACH transactions are efficient and low-cost.



## ATM

Connect to all major ATM networks.



## Banking

With a merchant bank account, you'll have access to our affordable rates and award-winning merchant services team.



## High-Risk

We're built to handle complex merchants, regardless of your industry.



## Lending

Lending your way to provide you with the instant capital you need.



## Merchant Cash Advance

Access the assets your business deserves.



## Remote Deposit Capture

With ECS, there's no need to go to the bank to cash payment checks.

To find out more [click here](#)




USA


## Z1 Retail Quick Reference Guide





### CREDIT SALE

1. From the **CREDIT SALE ENTER AMOUNT** enter credit sale amount and press **OK**
2. **Insert, Tap, Swipe OR Manually Enter Card #**  
- If AVS prompts, input AVS information
3. Terminal communicates with the Host
4. Response Displays 



### DEBIT SALE

1. From the **CREDIT SALE ENTER AMOUNT** Press the **F3** Key
3. Press the **F3** Key to **highlight DEBIT** and press **OK**
4. Input the Debit Sale **Amount** and press **OK**
5. **Insert, Tap or Swipe** Card #
6. **Input PIN #** on PIN Pad and press **OK**
7. Response Displays 



### TICKET ONLY SALE

1. From the **CREDIT SALE ENTER AMOUNT**
  2. Press the  yellow arrow key
  3. Scroll using the **F3** Key to highlight **TICKET** and press **OK**
  4. Input the ticket **Amount** and press **OK**
  5. Input previously obtained **AUTH CODE** and press **OK**
  6. **Insert, Tap, Swipe OR Manually Enter Card #**
  7. Response Displays 
- \*\* If/when prompted for Password, default is 1234


### VOID TRANSACTION

1. From the **CREDIT SALE ENTER AMOUNT**
  2. Press the  yellow arrow key
  3. Scroll using the **F3** Key to highlight **VOID** and press **OK**
  4. Input the **Amount to be Voided** and press **OK**
  5. Press **F1** to confirm Void Amount
  6. **Insert, Tap, Swipe OR Manually Enter Card #**
  7. Response Displays 
- \*\* If/when prompted for Password, default is 1234

### RETURN TRANSACTION

1. From the **CREDIT SALE ENTER AMOUNT**
  2. Press the  yellow arrow key
  3. Scroll using the **F3** Key to highlight **RETURN** and press **OK**
  4. Input the **Amount to be RETURNED** and press **OK**
  5. Press **F1** to confirm Void Amount
  6. **Insert, Tap, Swipe OR Manually Enter Card #**
  7. Response Displays 
- \*\* If/when prompted for Password, default is 1234


### SETTLE THE OPEN BATCH

1. From the **CREDIT SALE ENTER AMOUNT** press the **OK** button three (3) times.
3. **Input Password** (1234 Default) and press **OK**
4. Terminal communicates with the Host
5. Response Displays 

## Z1 Retail Quick Reference Guide



## VIEW DAILY REPORT

1. From the **CREDIT SALE ENTER AMOUNT** screen press **the OK button**
2. Scroll using the **F3 key** scroll to highlight **REPORTS** and press **OK**
3. Highlight **DAILY REPORT** and press **OK**
4. Report Displays
5. Use the F3 button to scroll 


## POWER ON/OFF

**POWER ON:**  
**PRESS AND HOLD F1 UNTIL UNIT POWERS ON**


**POWER OFF:**  
**PRESS AND HOLD F1 UNTIL UNIT POWERS OFF**

## MY FAVORITES

Adding Favorites

1. Highlight the menu item you wish to save to favorites. Press the F1 Key
2. Press the F1 to select **YES**
3. Use the **F3 key** to highlight the menu placement to assign this favorite to.
4. Press **OK** 

## View Summary Report


1. From the **CREDIT SALE ENTER AMOUNT** screen press **the OK button**
2. Scroll using the **F3 key** scroll to highlight **REPORTS** and press **OK**
3. Highlight **SUMMARY REPORT** and press **OK**
4. Report Displays
5. Use the **F3** button to scroll 

## INDICATOR ICONS

 Battery Strength Indicator

**WiFi Indicators**


 WiFi Connected

 Wifi Not Connected

**BlueTooth Connectivity**

When the Z1 is connected to your mobile Device via bluetooth it will read **"Bluetooth Connected"** on the display.

Managing Favorites

1. From the **CREDIT SALE ENTER AMOUNT** screen press **OK**
2. Scroll using the **F3 key** scroll to select **UTILITY** and press **OK**
3. **Input Password** (1234 Default) and press **OK**
4. Scroll using the **F3 key** scroll to select **FAVORITES** and press **OK**
5. Scroll using the **F3 key** scroll to select the desired **option** to edit and press **OK** 

Accessing Favorites

1. From the **CREDIT SALE ENTER AMOUNT** screen press **F1**
2. Use the **F3 key** to highlight Favorites and press **OK** 